



TCXII

POWER ASCENDER User manual

Introduction	A
Product safety & system description	B
Rope	C
Lifting systems & equipment setup	D
Battery care	E
Operation in water	F
How to use the Ascender	G
Service & maintenance	H
Warranty terms	I
Technical data	J





**HAND-BUILT
IN SWEDEN**

DISCLAIMER

WARNING

Training and experience are required to lower the risk of serious bodily injury or death.

This user's manual provides general information about safe operation and risks associated with the use of the SKYLOTEC ActSafe TCXII Power Ascender. It also gives details of maintenance procedures. Never use the equipment unless you have read and understood this manual and completed a SKYLOTEC approved training in the use of the Power Ascender system. SKYLOTEC, our partners and subsidiaries, disclaim any liability for damages, injuries or death resulting from the use of the equipment which is not in compliance with this manual. This manual may be updated without notice.

For more information about updates and safety warnings, visit www.skylotec.com



Failure to read and follow the instructions within this manual may result in fire, damage to property, personal injury or death.

THE TCXII RANGE

The SKYLOTEC ActSafe TCXII Ascenders are specifically designed for the use by military and law enforcement operatives. The TCXII Ascender range consists of four different models suitable to be used for a wide range of applications.



URBAN ASSAULT

Optimised for high speed ascents in urban and land-based environments.

WLL 150 kg (330lb)
Speed 0-60 m/min
(0-196 ft/min)



URBAN FORCE

This workhorse is perfect for any land-based operations where lifting capacity is essential.

WLL 250 kg (550 lb)
Speed 0-24 m/min
(0-78 ft/min)



SEAL ASSAULT

Specially designed for naval operations where every second counts.

WLL 150 kg (330 lb)
Speed 0-60 m/min
(0-196 ft/min)



SEAL FORCE

The perfect tool for heavy lifting in a marine environment.

WLL 250 kg (550 lb)
Speed 0-24 m/min
(0-78 ft/min)



Rain and splash proof.



Watertight up to 10 m (33 ft) for up to 4 hours.

FOREWORD

Thank you for choosing the SKYLOTEC ActSafe TCXII Power Ascender from SKYLOTEC.

This Ascender has been designed as an ultra-portable and versatile lifting tool for lifting trained military and law enforcement operatives in a safe and effective way. It revolutionises your operational capabilities in the vertical environment.

The TCXII Ascender is specially designed to accomodate selected ropes with diameters from 6 mm to 11 mm.

BE AWARE:
A Power Ascender is a hi-tech tool
and should be treated with care.

A

INTRODUCTION

About us	A.01
About this manual	A.02
Definitions	A.03

A

We are completely committed to our customers and do our utmost to deliver top quality products and service.



A.01 ABOUT SKYLOTEC

SKYLOTEC is a pioneer in developing powered Rope Ascenders and has been delivering high-performance equipment since 1997.

SKYLOTEC has a worldwide distribution network of dedicated experts selling our innovative products to a wide variety of users. Our Power Ascenders have been successfully used for installing fireworks at the top of the Eiffel Tower, hostage rescue from pirates at sea and providing essential logistical support in offshore wind turbines.

SKYLOTEC products are redefining the possibilities for work in vertical environments.

A.02 ABOUT THIS MANUAL

This manual gives detailed information on features and safety. However, this manual cannot replace the need for training and experience. The Ascender must only be used by operators who have undergone the SKYLOTEC approved training.

Safety messages of extra importance are highlighted throughout this manual using the signals 'danger', 'caution', 'note' and 'recommendation':



DANGER

Not following instructions or training methods may result in **SERIOUS BODILY INJURY** or **DEATH**.



CAUTION

Not following instructions or training methods may result in **BODILY INJURY**, or **DAMAGE TO PROPERTY**.



NOTE

Important information on the use of the equipment used with the Ascender.



RECOMMENDATION

Instructions and tips on how best to use the Ascender.

A.03 DEFINITIONS

Active/loaded rope

Loaded end of the work-positioning rope system.

Anchor

Attachment point for rope or Ascender.

Ascending

Moving up the rope.

Backup system

A rope system which captures the load in case of primary rope failure. Approved according to backup system requirements.

Competent person

Operator with adequate training, experience and certification.

Descending

Moving down the rope.

Passive/dead rope

Unloaded end of the work-positioning rope system.

Primary rope

Work rope system used with Ascender. TCXII Power Ascenders may only be used with ropes that have been selected by SKYLOTEC.

User/operator

Operator of the Ascender, either by the Throttle or by the Remote Control.

Secondary rope

See 'Backup system'.

WLL

Working Load Limit. The maximum load that an item of lifting equipment is designed to raise, lower or suspend.

B

PRODUCT SAFETY & SYSTEM DESCRIPTION

System introduction	B.01
Product safety	B.02
Usage exclusions	B.03
System description	B.04
Rope mechanism	B.05

B

B.02 PRODUCT SAFETY

TCXII Urban Assault and Urban Force



These Ascenders are especially designed to be used for any land based and urban operations, and are rain and splash proof (IP67).

Always check before use:

- » That the Ascender is used with IP 67 TCX Battery that is green with a black rubber bumper

TCXII Seal Assault and Seal Force



These Ascenders are especially designed to be used in a marine environment and are watertight up to a depth of 10 metres (33 ft) for a maximum of 4 hours (IP 68).

Always check before use:

- » That the Ascender is used with watertight IP 68 TCX Battery that has a grey rubber bumper
- » A pre-use check has been performed
 - Water tightness (See F.1)

TCXII Power Ascender operators must have undergone certified training in the safe use of the Ascender. SKYLOTEC can assist in providing a bespoke training and certification scheme for end users and trainers (train the trainer).

The TCXII Power Ascenders must be checked before every use by a Competent Person and must undergo a documented inspection by SKYLOTEC or an authorised Service Center at least once every year. More frequent inspections may be required by your national regulations.

The TCXII Power Ascenders are only approved for use by suitably trained military/law enforcement operatives due to the following specifications:


- » No emergency stop
- » High speed
- » Covert mode operation

B.03 THE ASCENDER **MUST NOT BE USED:**



- » For any purpose other than that for which it has been designed
- » In an explosive environment
- » If modified in any way by anyone other than SKYLOTEC
- » After a free fall from a height of more than 0.5 m (2 ft) or any other severe impact onto a hard surface
- » If subjected to misuse in any way so that parts or components might have been damaged
- » The Ascender system should not be exposed to high impact forces caused by people or loads falling into the system
- » With any Battery other than original SKYLOTEC TCX IP 68/67 Batteries
- » With any other Battery Charger than an original SKYLOTEC TCX Battery Charger
- » With a damaged or modified SKYLOTEC TCX IP 68/67 Battery or TCX Charger
- » If the operator is unsure of how to use the Ascender safely
- » If you are tired, ill, using prescription medication that prevents you from using machinery, or under the influence of alcohol and/or drugs
- » Without having performed a pre-use check
- » Near large magnetic fields


B.04 SYSTEM DESCRIPTION

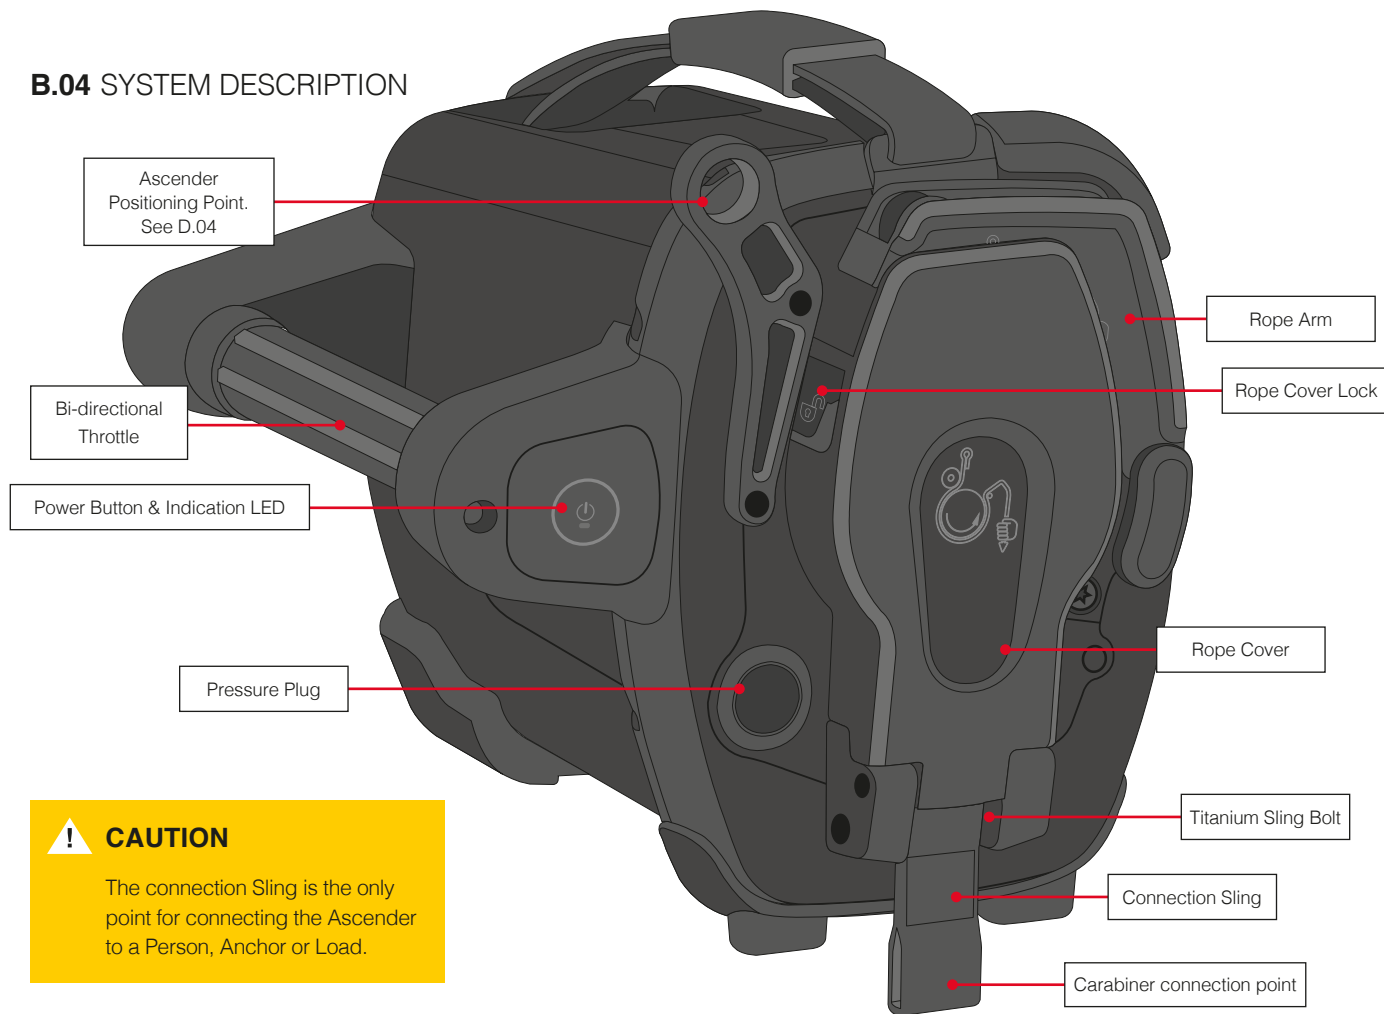

CAUTION

The connection Sling is the only point for connecting the Ascender to a Person, Anchor or Load.

B.05 ROPE MECHANISM

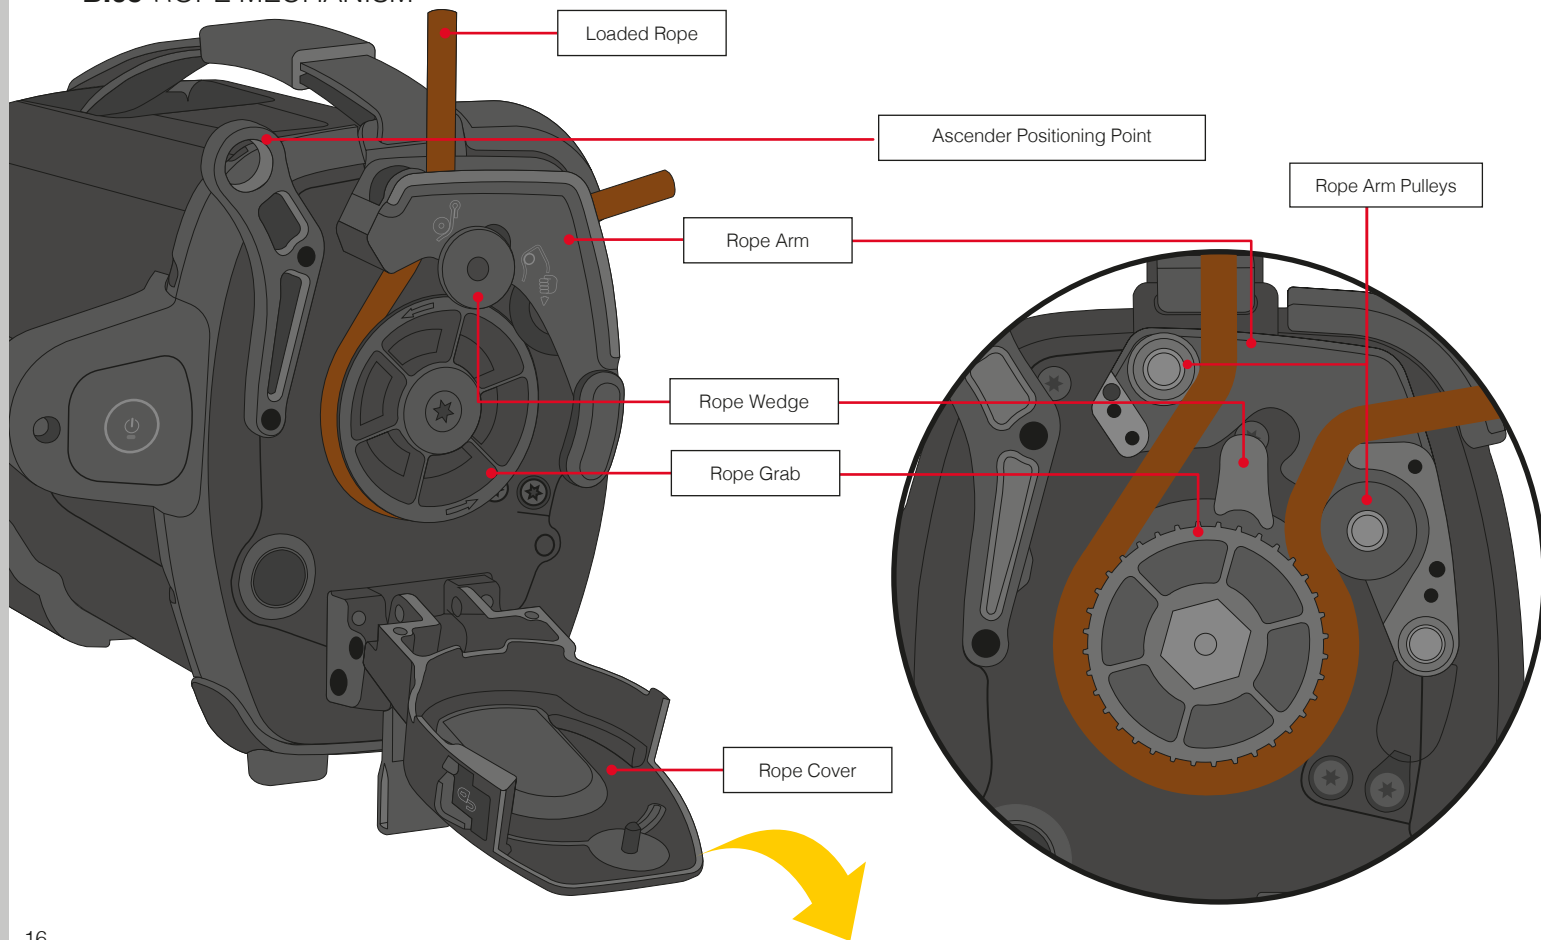

C

ROPE

Rope type
and preparation

C.01

C

C.01 ROPE TYPE AND PREPARATION

Selected Ropes

TCXII Power Ascenders may only be used with ropes that have been selected by SKYLOTEC. Selected ropes have gone through a thorough internal test procedure where the combination of rope and Power Ascender are tested under several circumstances. Additional restrictions on use may apply. The standard ropes that have been selected for use without restrictions on all Ascenders are EN1891A ropes. For best performance please use:

SKYLOTEC PLR - semi static 11mm

The use of smaller diameter ropes requires specific competence (competent person). Restrictions apply and the use of these ropes should be registered in a logbook. Please contact SKYLOTEC for rope recommendations:

SKYLOTEC PLR 11mm
SKYLOTEC Tactical Rope 7.5mm
SKYLOTEC Tactical Cord 6mm

Pre-Soaking (applies only to Polyamid ropes, i.e. Patron Plus and Assault)

Pre-soaking new ropes can increase the performance of the rope. New ropes may be put in cold water <40°C (104°F) for 24 hours and dried slowly afterwards.

This will make ropes more suitable for use in SKYLOTEC Ascenders for two reasons:

1. Rope density

Pre-soaking makes ropes denser. The fibres will absorb the water and will shrink when drying. The result is that all fibres become more densely aligned and the sheath sits tighter around the core of the rope. This will make the rope more solid and will consequently result in less mantle slippage and deformation and thereby lead to better grip in the Ascender.

2. Oil dissolution

During the production process some oil is added to the rope fibres in order to reduce the friction between the individual fibres. When soaking the rope in cold water some surface oil in the sheath of the rope will dissolve.

This will contribute further to a better grip. Do not soak ropes in warm water, this will lead to greater dissolution of oil, which will have a negative impact on the rope properties.



DANGER

Rope will wear during normal use. The rope must be discarded if the sheath is damaged and any part of the core is visible. The rope must also be discarded if there is any unusual shape/form or it has a glazed surface. Damaged part of rope must be discarded if the Ascender has ran into a top or bottom stopper knot.



CAUTION

Always make sure that the rope is in good condition.



RECOMMENDATION

A new rope will get an increased service life if it is soaked in cold water before the first use.

Avoid getting sand or dirt onto/into the ropes since it will wear the Rope Grab and Rope Guide. Use a rope mat, rope bag or similar.

D

GENERAL SAFETY GUIDELINES AND LIFTING SYSTEMS

General safety guidelines	D.01
Basic setup requirements	D.02
Safety checklist	D.03
Lifting setup	D.04
SKYLOTEC Training Network	D.05

D

D.01 GENERAL SAFETY GUIDELINES

The TCXII Ascender system requirements are described in the following pages.



DANGER

DO NOT use the Ascender if you are tired, ill, using prescription medication that prevents you from using machinery, or under the influence of alcohol and/or drugs.



CAUTION

DO NOT hold the loaded rope when ascending as there is a risk of pinching.

- » Operate the Ascender according to the advice contained within this user manual and standard operating procedures
- » Only trained and competent operators should operate the TCXII Ascender and its ancillary equipment
- » Plan and evaluate your work carefully. A rescue plan should be in place
- » Plan for appropriate supervision of work
- » Use only approved and inspected equipment
- » Inspection of equipment must be carried out in accordance with local regulations. The Ascender must undergo a documented inspection carried out by SKYLOTEC or an Authorised SKYLOTEC Service Centre at least once every year
- » Pre-use check of the Ascender should be carried out in accordance with the inspection guidance provided (see G.10)
- » Use PPE (Personal Protective Equipment) such as helmet, gloves and protective eye wear when required
- » Keep your hands, hair and clothing away from moving parts
- » Do not hold the loaded rope when ascending as there is a risk of pinching
- » Keep a constant eye on the rope arm to ensure that the rope is running smoothly through the rope mechanism
- » Do not put force on the rope arm in any direction other than it is intended for

D.02 BASIC SETUP REQUIREMENTS

The TCXII Ascenders, must be used with personal protective equipment approved for work at height, rope access, mountaineering and/or rope rescue.

Basic requirements:

The rope system must consist of a primary work rope system and a secondary backup rope system. For personnel lifting the primary rope used in the Ascender must be one of the ropes selected by SKYLOTEC and the backup system must fulfill the respective requirements.

Each rope system must be connected to an anchor that meets the appropriate personal lifting requirements. A competent person shall judge if the anchor points are sufficient and safe to use.



NOTE

Ensure that you have a suitable backup system in place. Take particular care of the suitability of the system when lifting more than one person.

D.03 SAFETY CHECKLIST

Before use make sure that you:


- ✓ Check all equipment and components
- ✓ Wear appropriate clothing and tie back any loose clothing or hair
- ✓ Do not swing excessively while descending/ascending
- ✓ Only use the Ascender if you have successfully completed the approved training course
- ✓ Have an emergency plan in place



DANGER

Special operational conditions may preclude the use of the backup system. The decision **NOT** to use a backup system should be taken with great care and only after a thorough assessment of all risk involved in the operation. All parties involved should be aware that this is a deviation from standard operation procedures and the manufacturer will disclaim any resultant liability and/or responsibilities for damage, injury or death.

2-Rope system

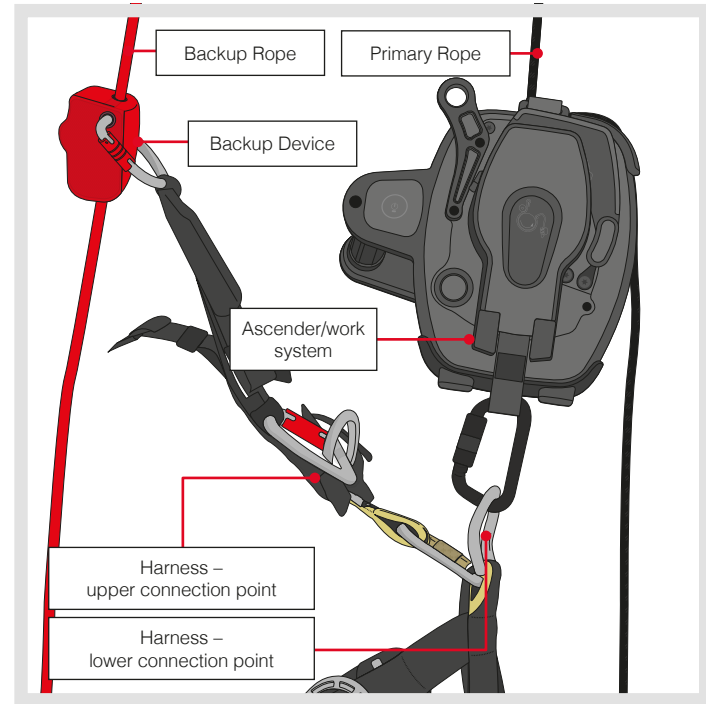

NOTE

When driving the Ascender, the operator is advised to wear a fall arrest harness that is also suitable for work-positioning/rope access.

Primary Rope

Helmet

Harness

Backup Rope

Gloves

Backup Rope

Primary Rope

Backup Device

Ascender/work system

Harness – upper connection point

Harness – lower connection point

D.04 LIFTING SETUP

Displayed here are the standard lifting setups that are suitable for use with the TCXII Ascender. They are shown for illustration purposes only. For further guidance, please contact your SKYLOTEC distributor or SKYLOTEC Nordic AB.



DANGER

To prevent damage to the rope, the operator must stop the Ascender if the motor spins and the Ascender does not move.




NOTE


The supplied SKYLOTEC Carabiner may be replaced with any other *EN362* (or any other approved lockable connector, Non EU countries). connector. All other parts of the Ascender should only be replaced with original parts by an Authorised Service Centre.

Active

Basic setup

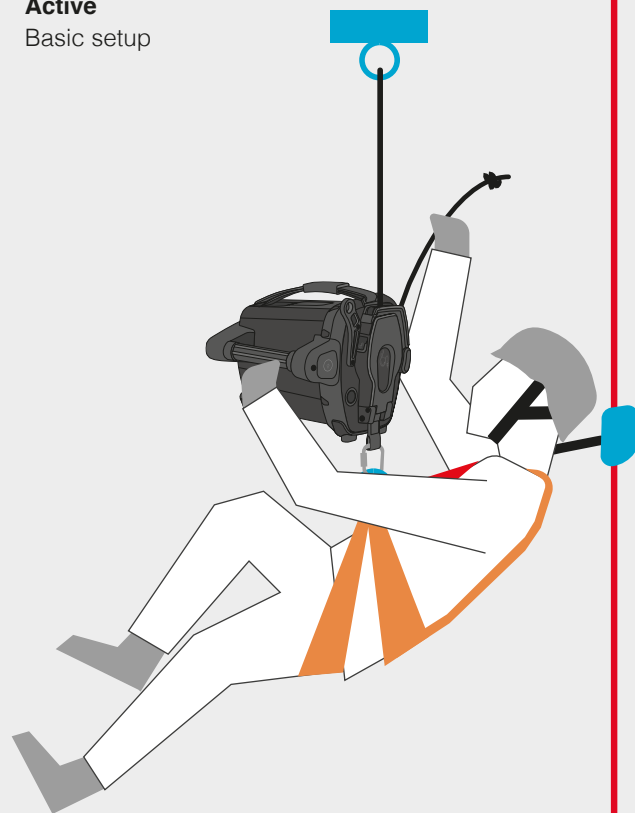


Top Rigged Basic setup

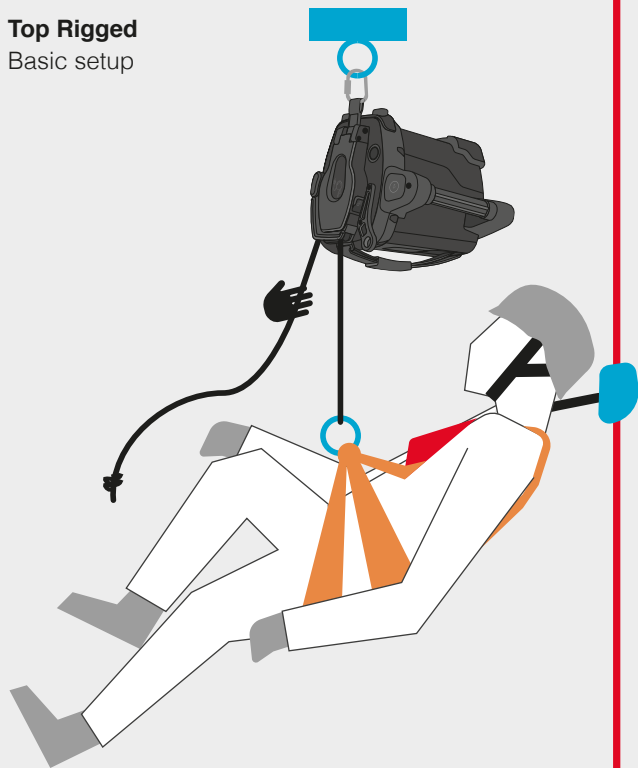

CAUTION

Always hold the unloaded rope when the Ascender is rigged to an anchor.


Bottom Rigged Basic setup

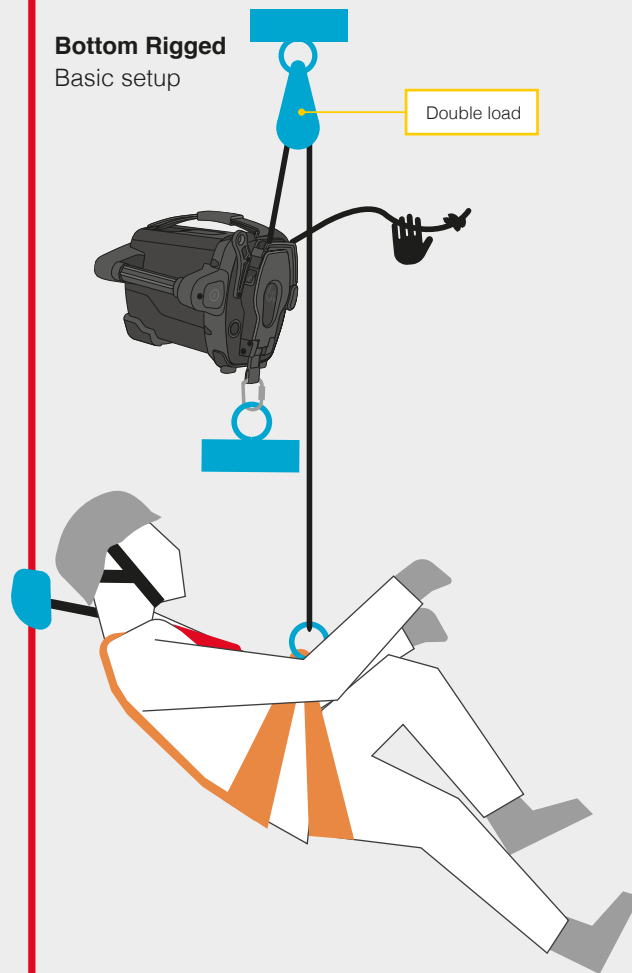

Double load


Pulley


Advanced setup

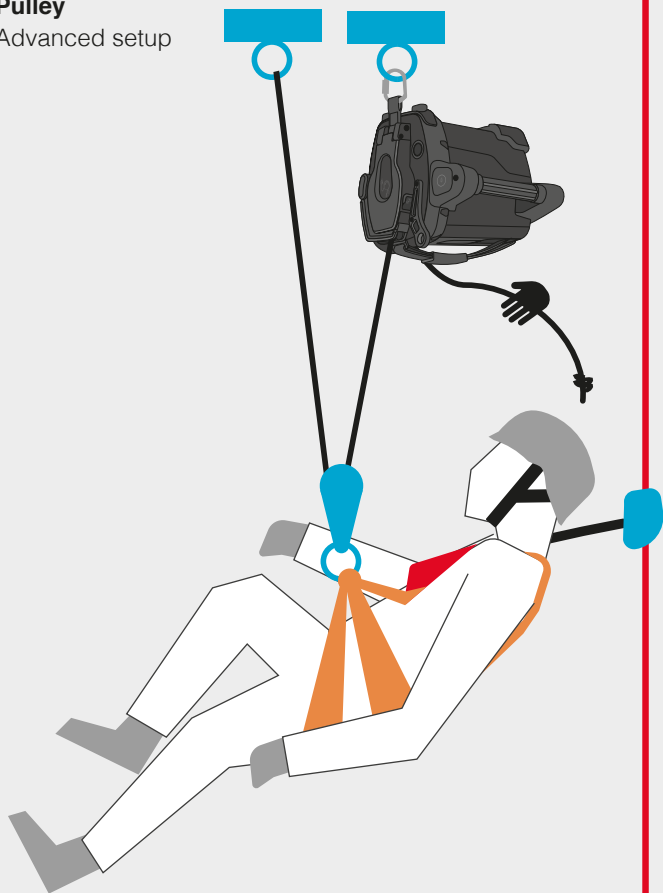

Pulley

Advanced setup.
TCXII pulley
rigging
on a single anchor

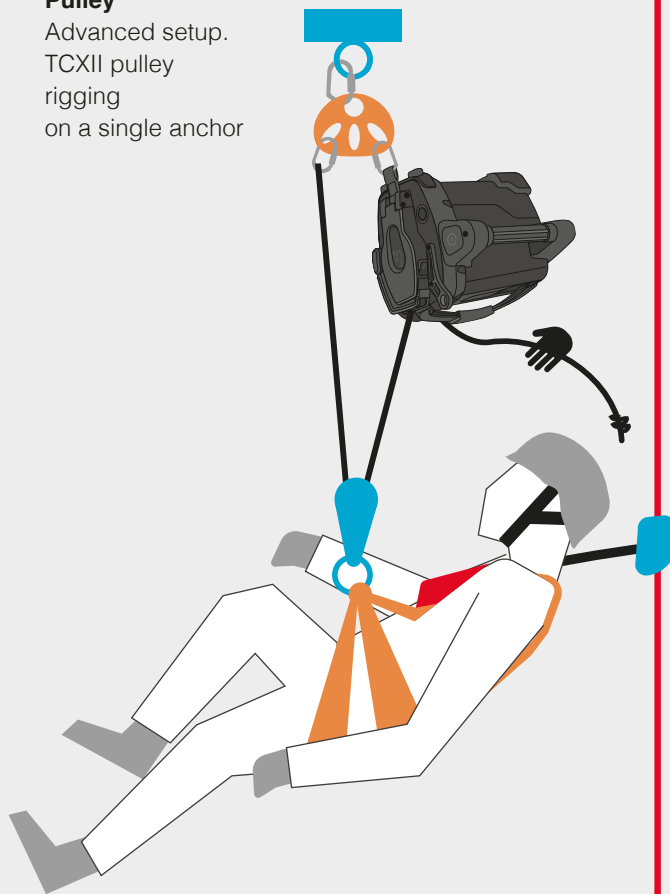

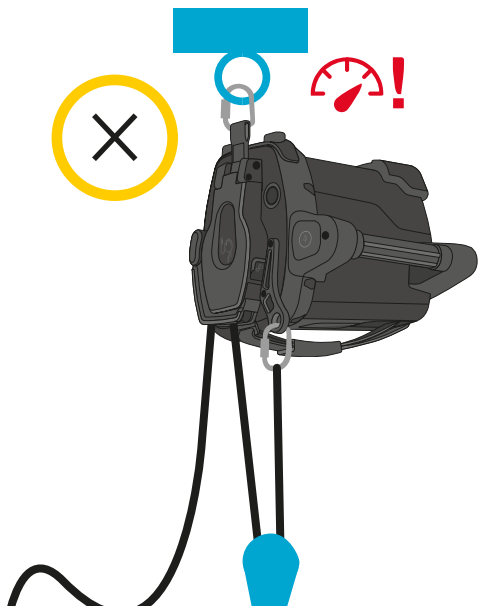


! CAUTION

Do not use the Ascender Positioning Point as an anchor extension for making pulley systems as this can cause double-loading of the frame plate, Sling Bolt and Connection Sling with the risk of having an insufficient factor of safety on the connection sling.

Ascender Positioning Point

Correct use

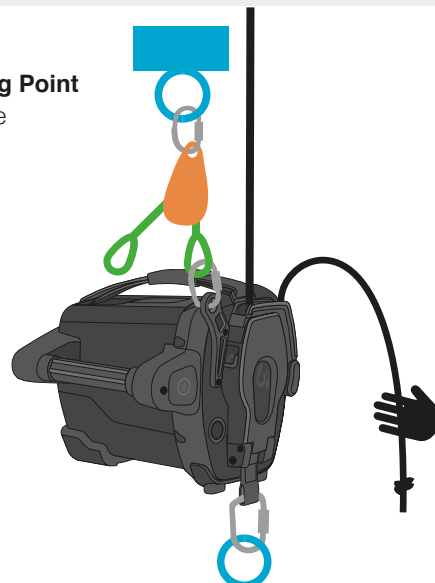

✓ NOTE

This setup can be used in cases where the Ascender is rigged to an anchor and the operator wishes to avoid the Ascender dropping when the rope becomes unloaded. However, the Ascender must be allowed to rotate freely while suspended.

D.05 SKYLOTEC TRAINING NETWORK

The SKYLOTEC Power Ascenders are extremely versatile high-tech lifting tools that are designed for use in demanding environments.

Working with these Ascenders requires experience, competence and a thorough understanding of its possibilities and limitations. Therefore, training is essential.

We offer the SKYLOTEC training programme through our network of highly competent instructors, who are specialists in their respective field of operation and will help you get the most out of your SKYLOTEC Ascender.

SKYLOTEC training is available for different skill levels and fields of application and can be provided on site or in training centres all around the world. Get in touch with your local distributor or with SKYLOTEC to learn more about training possibilities.

SKYLOTEC TRAINING

SKYLOTEC training is developed to offer a modular system with the aim to meet the level and needs of the customer. At the end of each training course the operator will be able to use the Ascender System in a safe and appropriate manner. For bespoke training solutions contact the Skylotec Vertical Rescue College.

SKYLOTEC PERSONAL LIFTING

Experience: Hold a valid work at height certificate or equivalent.

Duration: Minimum 2 days

This is a modular training for future Ascender operators to give them the knowledge and skills for using Ascenders for a designated task. The training outline and duration will vary upon the skill level of the participants.

E

BATTERY CARE

The Ascender Battery	E.01
Performance	E.02
Battery charging	E.03
Battery Status Indicator	E.04
Descending on a full Battery	E.05
Battery colour code	E.06
Connecting and disconnecting the Battery from the Ascender	E.07
Storage and transportation	E.08
Battery lifetime and disposal	E.09

E

E.01 THE ASCENDER BATTERY

SKYLOTEC Ascenders use specially designed lithium-based batteries with a very high energy density and are therefore very compact, lightweight and extremely powerful. Due to the high energy the batteries contain, it is of utmost importance that they are treated with care and that the user has read the following section with attention. This is for your own safety, but also for optimal Battery life and performance.



DANGER

ONLY use the Original Black/ Grey TCX Batteries (IP 68) in the TCXII Seal Assault and Seal Force Ascenders. Use of any other batteries could cause the Battery to catch fire or to explode when used underwater.

SKYLOTEC recommends users to follow the Battery care guidelines below for optimal lifetime and performance:

-  Battery can stay connected to TCXII during transport or short term storage (1 week). For longer storage, store Battery disconnected and do a maintenance charge every 3 months
-  Always charge batteries after use
-  Disconnect batteries from the charger after charging
-  Always store batteries fully charged
-  Store batteries between 5°C (41°F) and 25°C (77°F)



DANGER

Not following instructions may result in **SERIOUS BODILY INJURY** or **DEATH** or damage to property.



NOTE – Battery lifetime

Under normal service conditions it is expected that the Battery will last up to 5 years. The lifetime is dependent on the intensity of use, how much load is lifted and the operational temperatures

See also section E.09.

General guidelines and warnings

- » Battery charging must be conducted in a safe area away from combustible or other flammable materials.
- » **DO NOT** charge the Battery unattended
- » When hot, allow the Battery to cool down to room temperature before charging
- » Immediately remove the Battery or charger from service:
 - If there is visible damage to the housing, cables or connectors, including the Battery Connectors on the Ascender
 - If the Battery has been dropped as there may be internal damage that isn't visible
 - If the Battery emits an unusual smell, feels hot, produces smoke, changes shape, or appears abnormal in any other way.

Since a delayed reaction can occur, observe the Battery for a minimum of 15 minutes in a safe area and away from any combustible material

- » Only use the original TCX Battery Charger
- » **DO NOT** disassemble or modify the Battery in any way. The Battery contains safety and protection electronics, which, if damaged, may cause the Battery to generate heat, explode or ignite
- » Charge stored Batteries at least every 3 months

Battery Management System (BMS)

The TCX Batteries have built-in safety electronics which constantly monitor and manage the charging levels, temperature and energy output of all the cells in these batteries. The BMS is designed to shut down the Battery temporarily in case of overheating

or overcharging to avoid Battery damage and prevent the Battery from becoming unstable or catching fire. In case of too low a charge (deep discharge) or worn out Battery cells, the BMS may shut the Battery down permanently. This is to prevent the Battery becoming unstable and dangerous to the user.

When used and charged correctly, the BMS will increase the safety and service life of the Battery substantially. The BMS cannot protect the Battery from severe misuse as mentioned earlier. Follow the Battery care instructions to enable a long Battery life.



DANGER

DO NOT use any other Battery chargers as they can damage the Battery and may create toxic gases which can cause a fire.

E.02 PERFORMANCE

Ascender Performance

The lifting distance of the Ascenders, and also speed in the case of the TCXII Seal Assault / Urban Assault, are dependent on the lifted load and temperature of the environment. The optimal operating temperature range is between 5°C (41°F) and 35°C (95°F). The maximum temperature range is from -10°C (14°F) to 40°C (104°F); the Battery performance will be greatly affected in these extreme conditions. See charts opposite for detailed information.

Battery Capacity

Low temperatures:

The capacity of the Battery is affected at temperatures below 5°C (41°F) which will result in an initial loss of lifting performance (speed) and will affect the lifting distance. The Battery will behave as if it wasn't fully charged but will warm itself during the first minutes of operation. Lifting performance is regained but there will be a loss in distance depending on the temperature of the environment.

High temperatures:

Battery performance will be affected by temperatures over 40°C (104°F) which will result in high internal Battery temperatures and therefore in a reduced lifting distance. In case of the Battery overheating the BMS may shut the Battery off until the Battery has cooled to operating temperature.



RECOMMENDATION

In cold environments, maintain optimal Battery temperature and performance by keeping the Battery in the transportation box as long as possible.



NOTE – Battery lifetime


Initial lift speed capacity will be limited with a cold Battery. It is only possible to ascend at lower speeds until the Battery warms up and normal performance can be expected.

There is a difference in performance between old and new batteries, all figures are based on new batteries.

Lifting specification: **TCXII SEAL ASSAULT/ URBAN ASSAULT**

Lifting distances with 100 kg
(220 lb) and 150 kg (330 lb)
at different temperatures.


Lifting distance

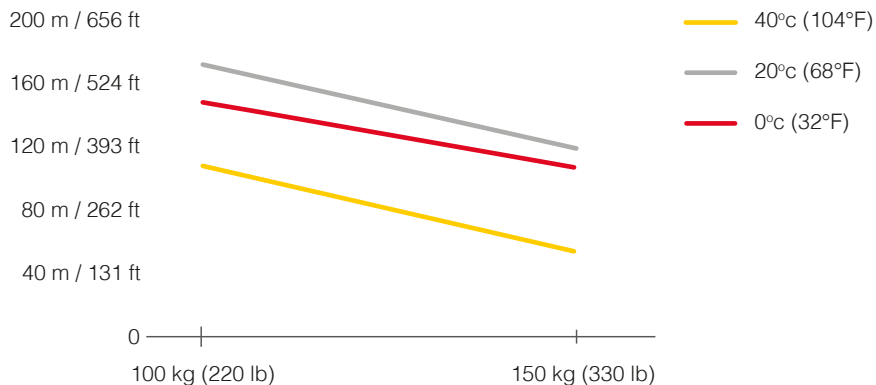

NOTE

All values on this page apply to operating temperatures. Ascenders and especially batteries should be stored between 5°C (1°F) and 25°C (77°F) for optimal performance and service life. **For more info see section E.09.**

Speed vs Load

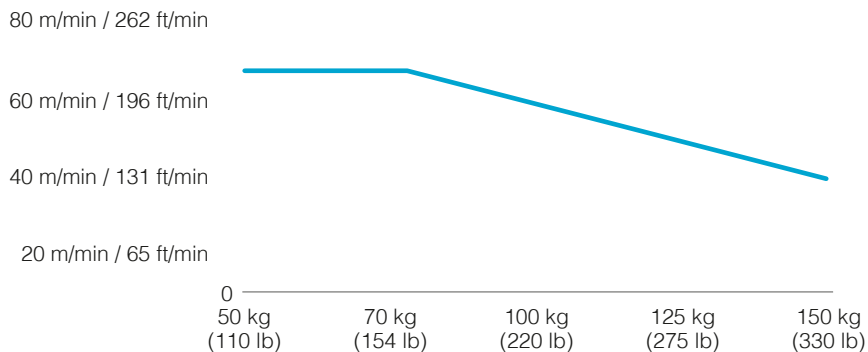

Lifting specification: TCXII SEAL FORCE / URBAN FORCE


Lifting distances with 100 kg
(220 lb), 150 kg (330 lb) 200 kg
(440 lb) and 250 kg (550 lb)
at different temperatures.



NOTE

All values on this page
apply to operating
temperatures. Ascenders
and especially batteries
should be stored between
5°C (1°F) and 25°C (77°F)
for optimal performance
and service life. **For more
info see section E.09.**

Lifting distance

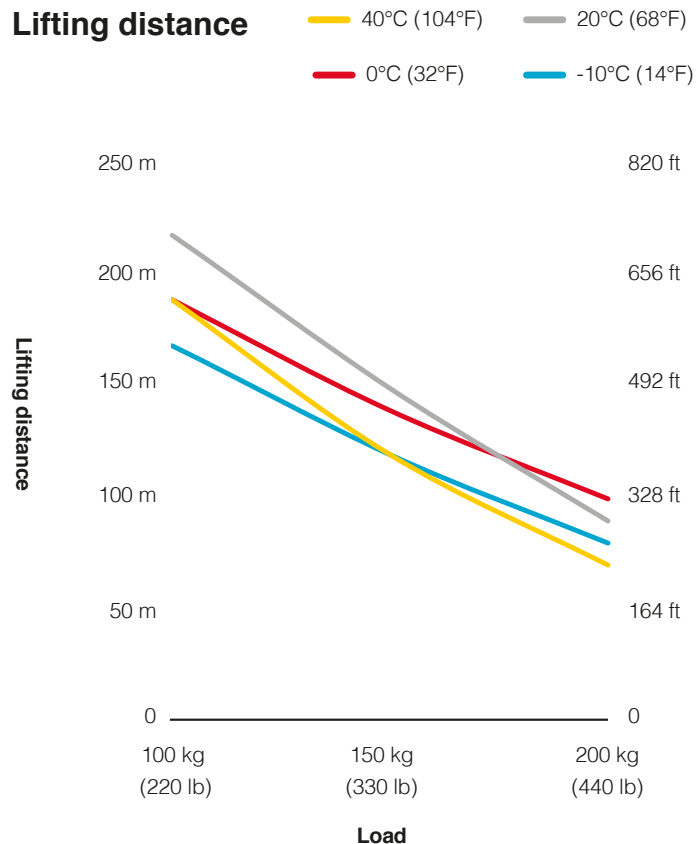

E.03 BATTERY CHARGING

The TCX Battery can be charged at any charging level, no 'memory effect' will occur. It is important that the batteries are charged with an original SKYLOTEC TCX Charger.

The charging time is dependent on the charging level of the Battery. The maximum charging time is 80 minutes. During charging the current charging level is displayed on the Battery LEDs and the Battery is fully charged when all 4 LEDs are lit continuously.



CAUTION

Inspect before charging the Battery, the Charger Cables and the insulation on the socket to avoid risk of electric shock.



NOTE

Charging must be carried out in a dry area.

Disconnect the charger from the power source when not in use.

Balancing:

After the Battery has been fully charged, the BMS will start to balance the Battery for another 10 minutes. Balancing is a process where the Battery Management System equalizes the charging levels of all the cells in the Battery pack in order to optimize the lifetime and performance of the Battery. The Battery LEDs will slowly pulsate after the balancing is complete.

1. Connect the Charger to mains supply
2. Connect Battery to charger
3. Constant charging controlled by BMS. The Battery is full when all Battery LEDs are continuously lit
4. 10 minutes balancing and all LEDs are lit continuously. The LEDs slowly pulsate when balancing is completed
5. Disconnect Battery from charger
6. Disconnect Charger from main supply




DANGER

DO NOT touch the Battery Charger during charging with wet hands or disconnect the plug by pulling the cord.

E.04 BATTERY STATUS INDICATOR

The Battery Status Indicator is positioned at the back of the Battery and can be activated by pushing the button next to the LEDs. The Battery Indicator has 4 LEDs each representing 25% charge.

LEDs	Capacity
1 red, 3 green	75-100%
1 red, 2 green	50-75%
1 red, 1 green	25-50%
1 red	0-25%

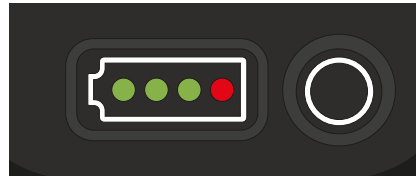

E.05 DESCENDING ON A FULL BATTERY

When starting your workday with a traditional ground up ascent the feature of regenerating energy while descending to charge the battery gives the user some extra battery range. However, if starting top down this feature becomes a limitation as there is nowhere for the energy to go if the battery is already fully charged. Therefore, the descent speed will be very slow if this is attempted, and we strongly recommend that this work procedure is avoided.

- Plan your work so that starting descents on a full battery is avoided.
- Any distance that has been ascended can always safely be descended on the same battery.

- Only use Emergency descent as an emergency measure, using emergency descent wears the brake disc and will lead to higher maintenance costs.
- If possible, use a Portable Power Supply (PPS) which will allow for top down work almost without limitations.
- The battery doesn't have to be fully charged if you know that the next day will start with top down work, the charging process can be aborted at any given point at a charging level suitable for next job.

The Ascender can also be run full speed with remote control without load for 5-15 minutes to discharge the battery enough to safely and

efficiently operate on top down jobs. Approximate time from 100% charge:

- 5 minutes to reach 90% charge where battery charge level will no longer limit the operation. After this point each minute will add 15 meters of decent capability with 100kg.
- 10 minutes will give 5 x 15 meters = 75 meters descent capability with 100kg."



CAUTION

DO NOT descend on a fully charged Battery as a standard procedure.

E.06 BATTERY COLOUR CODE




DANGER

DO NOT use the Green/Black Assault/Force (IP 67) Battery for diving!

Colour Battery Code

The TCX Battery comes in two different encapsulation classes and are normally supplied with the respective Ascender. The two different Battery models can be recognised by their different colours.


IP68

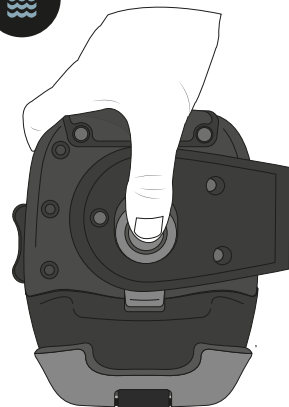

TCXII SEAL ASSAULT AND SEAL FORCE

This black with grey boot Battery is specially developed for the TCXII Seal Assault and Seal Force Ascenders with an IP 68 rating. This is the only type of Battery that shall be used on the TCXII Seal Assault and Seal Force Ascenders. Ensure that the grey Battery boot and grey Lock match.


IP67

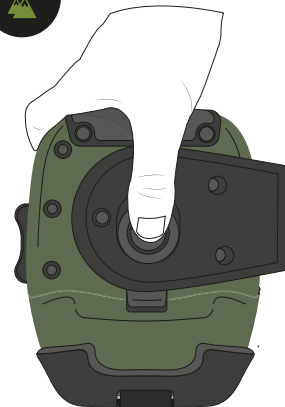

TCXII URBAN ASSAULT AND URBAN FORCE

This green marked Battery is IP 67 rated and should be used on the TCXII Urban Assault and Urban Force Ascenders which have both the same IP rating. Ascenders and batteries can be recognised by the green coloured Battery and green Ascender housing and Battery Lock.

E.07 CONNECTING AND DISCONNECTING THE BATTERY FROM THE ASCENDER

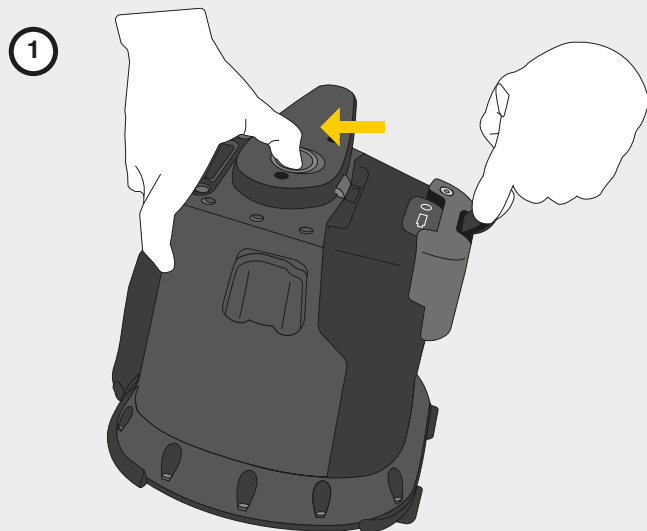


2



CAUTION

When connecting or disconnecting the Battery ensure that the Battery is held or secured by the Battery strap.

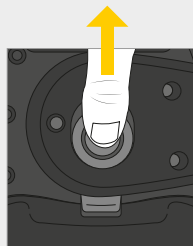

Disconnecting the Battery

1

Hold the Battery and slide the release catch upwards

2

Release the Battery by pulling the Battery Strap with your finger or a Carabiner

Connecting the Battery:

Slide the Battery onto the Ascender and ensure that the Battery is locked. **The Battery Lock must snap into its position (click).**

There are 2 different TCX Batteries, which have different bumper colors. The Bumper color must match with the color of the release catch on the Ascender.

E.08 STORAGE AND TRANSPORTATION

- » All lithium-ion batteries degenerate over time, even if they are properly stored. Disconnect the Battery when stored for longer periods with 100% charge
- » If storing a Battery for a long time, recharge the Battery every third month
- » Ideally store the Battery at room temperature of 5°C (41°F) to 25°C (77°F). Storing at higher temperatures will result in a loss of performance and a shortened service life
- » Do not store the batteries at temperatures higher than 60°C (140°F) for extended periods, as this will cause damage to the Battery and possibly result in fire. *Batteries stored in temperatures below 5°C (41°F) will show severe loss in performance during use, but will not sustain any permanent damage because of the storage in low temperatures

- » The user assumes total responsibility for all risks associated with lithium-based Battery technology
- » Product warranty is limited to original defects in material and workmanship. The Warranty does not cover collateral damage

The Battery lifetime is dependent on a lot of different factors such as: intensity of use, charging cycles, storage temperature etc. For this reason it is very difficult to give a specific indication on the service life of a Battery, see also E.01. The Battery Management System or BMS constantly monitors the condition of all the cells in the Battery and is designed to shut the Battery down auto-matically if the cells become too worn out. In this instance the Battery can no longer be used.

E.09 BATTERY LIFETIME AND DISPOSAL



Do not incinerate or dispose of the Battery in your normal waste system. Dispose of the Battery at a recycling centre as per the appropriate regulations.



CAUTION

Storing an empty Battery or a Battery with low charge level can damage the Battery irreversibly (deep discharging).

Store in conditioned environment.



NOTE

Batteries are fully regulated as Dangerous Goods (Class 9 UN3480 Lithium Ion Batteries) and must be handled and shipped accordingly. A defective Battery must not be shipped.

F

OPERATION IN WATER

Operation in water	F.01
Buoyancy Aid	F.02
Diving	F.03


F

F.01 OPERATION IN WATER

The TCXII Seal Assault and Seal Force Ascenders are water proof to a depth of 10 metres (33 ft) for a maximum of 4 hours.

Both the TCXII Seal Assault/ Seal Force Ascenders and Battery are equipped with a pressure valve in order to have the possibility to test the water tightness.

The Ascender housing and the valves shall not be opened by anyone other than SKYLOTEC approved competent person. Unauthorised opening could be result of the TCXII Seal Assault/ Seal Force Ascender or black/ grey TCX Seal Battery becoming susceptible to water entry.

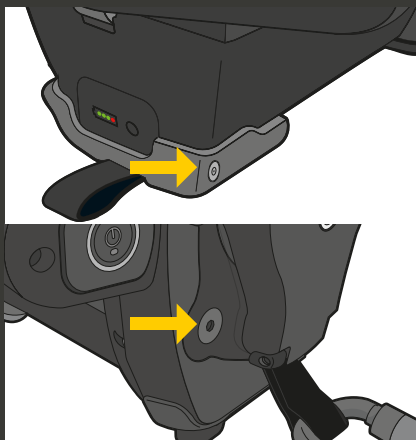

DANGER

Water entry inside the TCXII Ascenders can cause serious short circuit reactions and water entering the Battery can create flammable gasses that can cause explosions.



RECOMMENDATION

Prevent the TCXII LED from lighting up during operation by engaging the covert mode (See G.02).



NOTE




After use in saltwater the Ascender should be cleaned by soaking for 2 hours in fresh water. During this period all buttons and moving parts should be operated several times to ensure that all salt residue dissolves. Let the Ascender dry afterwards for at least 24 hours before storing.

F.02 BUOYANCY AID

The Ascender is not buoyant itself; a separate Buoyancy Aid is supplied and can be mounted instead of the carrying handle.

If the Buoyancy Aid is fully inflated, the Ascender will float at surface level below water level the buoyancy can be adjusted accordingly.

The Buoyancy Aid can withstand an internal pressure of 2 bar at surface level without failure, equivalent of filling it at depth of 10 m (33 ft). i.e. the neutral depth can be adjusted from 0 to 10 m (33 ft) by emptying or adding air.

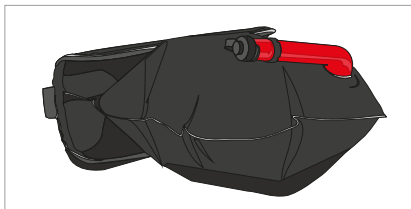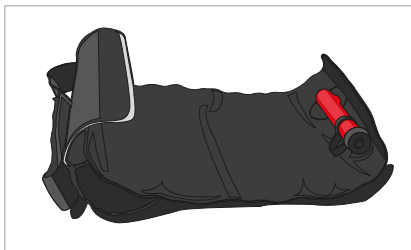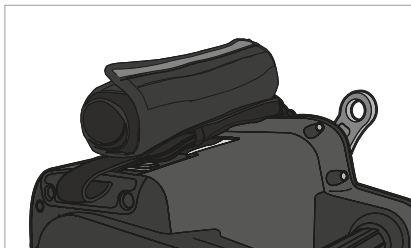

NOTE

It is not necessary to let the air out when approaching the surface; the Buoyancy Aid can withstand the increased pressure at surface level.

F.03 DIVING

The TCXII Seal Assault and Seal Force Ascenders are specifically designed to be used for diving operations. It is essential before any diving operation that operators have checked that the Ascender is in perfect condition. The Ascender must be tested for watertightness and function before every dive. See G.10 for more information.


G

HOW TO USE THE ASCENDER


Loading the rope	G.01
Ascender activation	G.02
Ascent and descent	G.03
Emergency descent	G.04
Twisted rope and rotation	G.05
Remote Control	G.06
Remote Control operation	G.07
Transportation	G.08
Storage	G.09
Checklist before use	G.10

G.01 LOADING THE ROPE


The Ascender must be switched off while loading the rope.

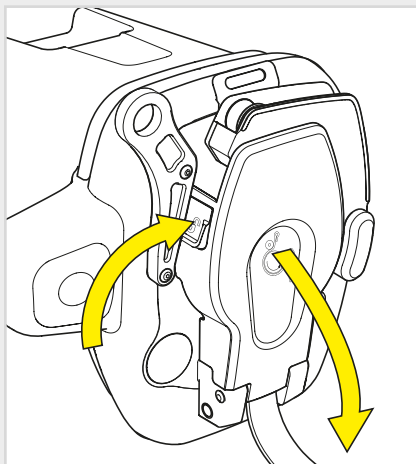


- 1.** Open the Rope Cover by pulling on the Rope Cover and pushing the Rope Cover Lock on the left side.

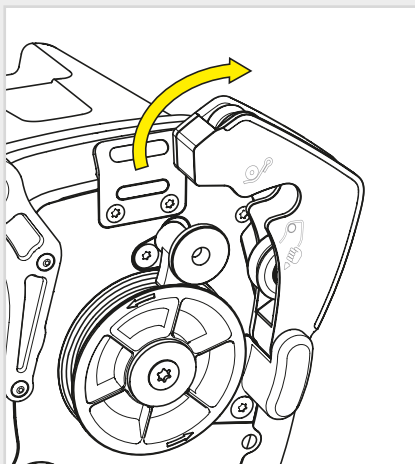


- 2.** Lift the Rope Arm with one hand.

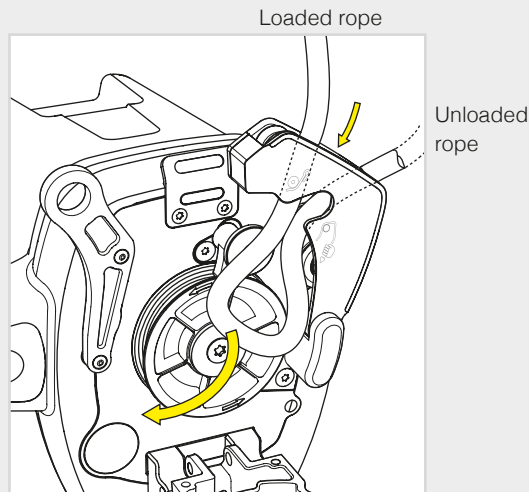

- 3.** Make a loop on the Rope and feed through the Rope Arm with the other hand. The left side of the Rope should be the loaded rope

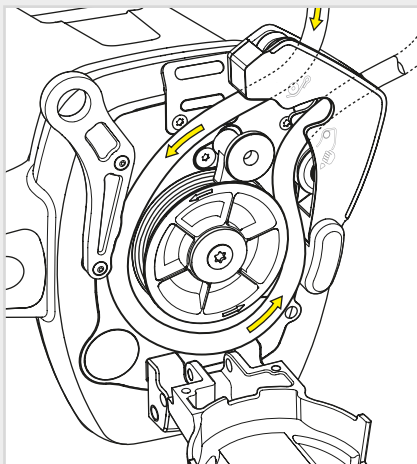

4. Place Rope around Rope Grab.

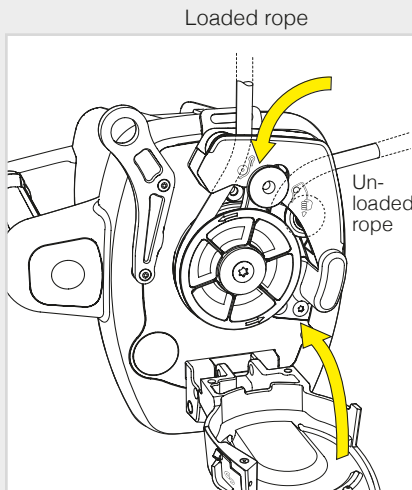

5. Lower the Rope Arm. Ensure that the Rope is centered on both the left and the right pulley in the Rope Arm. Close the Rope Cover. Ensure it is locked. The Rope Cover Lock should snap into its position with a distinct 'click'.

DANGER

Always check that the rope is attached correctly and has a stop-knot on the other end of the rope. Failure to attach the rope correctly could result in **SERIOUS INJURY** or **DEATH**.

DANGER

Always use a figure-eight knot as stop-knot. On ropes thinner than 11mm, a stopper donut disc should be placed on the rope before the knot.

The damaged part of the rope must be discarded if the ascender has ran into the stop-knot.

CAUTION


Ensure that the Rope Cover is locked into position and that the rope is running the correct way.

Never attempt to force the Rope Cover.

G.02 ASCENDER ACTIVATION

Switch the Ascender on by pushing the Power Button for 2 seconds. The green indicator LED starts blinking and the Ascender performs a self-test, which will take a few seconds.

The Ascender is ready to use after you hear a distinct clicking within the Ascender (brake test) and the green LED indicator is lit continuously. The Ascender will remain on for 1 hour after its last operation or until turned off.

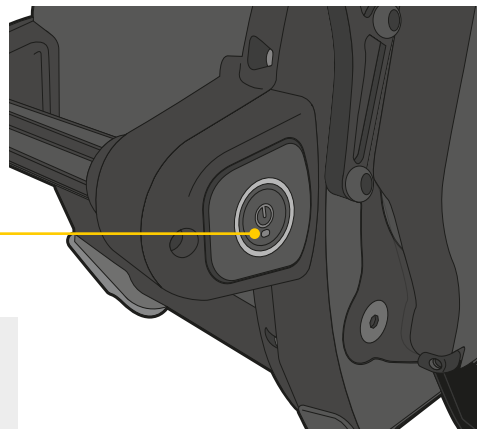

BLINKING GREEN

The Ascender is starting up and performing self-test



GREEN

The Ascender is on and ready to use



BLUE

The Ascender is being operated by the Remote Control



ORANGE

Overheat indication shown when power button is pushed in case of Ascender overheating



RED

A fault has been detected and the Ascender will not operate. Restart the Ascender. If the red light remains lit on restart, check the troubleshooting guide



BLINKING RED

The Rope Cover is open while trying to operate the Ascender. Close the Rope cover and try again



(Covert mode)

Double click the power button while the TCX is on and the green LED is switched off. Recommendation: Turn the LED on after use to avoid confusion when using the TCX the next time



NOTE


The Ascender has no standby function, the Ascender can only be switched on by pushing the Power Button.

G.03 ASCENT & DESCENT

To move the Ascender up the rope, ensure the Rope Cover is properly closed and pull back on the Throttle. The Ascender can not move with the Rope Cover open. When released the Throttle will return to the neutral position and the Ascender will stop moving.

To move down the rope, push the Throttle in the opposite direction.

Adjust the speed according to the circumstances, be aware and use common sense.

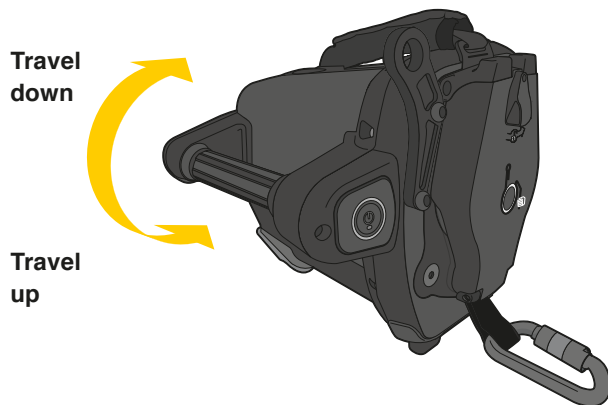

! DANGER

To prevent damage to the rope, the operator must stop the Ascender if the motor spins and the Ascender does not move.

! CAUTION

DO NOT hold on to the loaded rope just above the Ascender, as there is a risk of injury.

i RECOMMENDATION

Stand straight beneath the anchor point in order to avoid a pendulum movement when starting off the ground.

✓ NOTE

Make sure that the unloaded rope runs in a controlled manner out of the Ascender. Take special care feeding the loose rope into the Ascender when descending.

All TCX Ascenders have a electronic monitoring system that prevent overloading, the Ascender will stop above following loads:

TCX Seal Assault / Urban Assault ≈150 KG


TCX Seal Force / Urban Force ≈250 KG

G.04 EMERGENCY DESCENT

The emergency descent is ONLY to be used to get down in a safe and controlled manner in case of an Ascender failure.

The Emergency Descent Lever enables a mechanical release of the Ascender brake, and it should NEVER be used during normal operation because emergency descent can, in rare cases, damage the Ascender.

- Only use Emergency descent as an emergency measure, using emergency descent wears the brake disc and will lead to higher maintenance costs.
- The emergency descent speed is user regulated but should be kept to slower than the maximum ascent speed. Using the Emergency descent bypasses many of the electronic safety systems and you risk damaging the Ascender or battery if higher descent speeds are used. Such damage will not be covered by warranty.
- Emergency descent shall not be practiced over long distances for training purposes, one or two meters at low speed is enough to understand how it works.

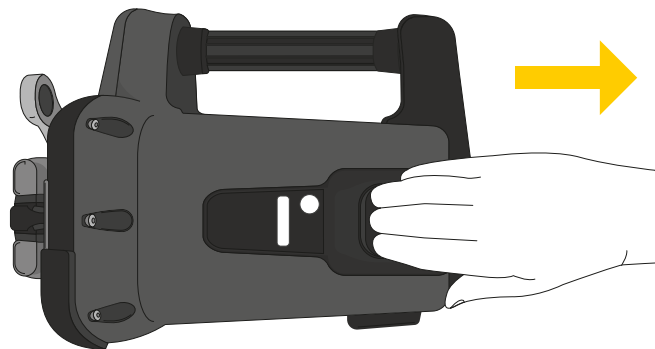

Emergency descent procedure:

1. Hold the dead rope in one hand
2. Descend by gently pulling the lever backwards as shown
3. Stop the descent by letting go of the descent handle



CAUTION

An emergency descent can result in serious damage to the Ascender. Only use the emergency descent in case of an emergency.

If you do need to descend manually, control your speed and hold the dead rope in one hand while descending.



RECOMMENDATION

Always try to restart the Ascender first before using the emergency descent method.




NOTE

In case the Ascender is stopping during ascent because of an empty Battery, it is still possible to descend whilst using the Throttle.

Take care not to engage the Battery release when using the emergency descent since this could result in disconnecting and dropping the Battery.

G.05 TWISTED ROPE AND ROTATION

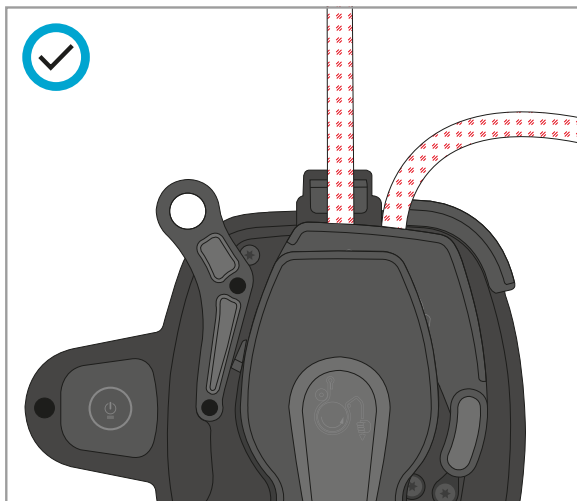


Ensure, especially when descending, that the rope runs untwisted into the Ascender. Twisted ropes caught into the Rope Arm can cause a rope jam and can, in rare cases, result in rope damage.

CAUTION

When descending, make sure the rope is fed neatly into the Rope Grab so that there are no kinks or twists in the rope. Take special care when using long ropes to prevent twists or kinks. Good rope management is **ESSENTIAL**.

RECOMMENDATION

When descending, hold the rope entering the Ascender to prevent it from running twisted into the Ascender.

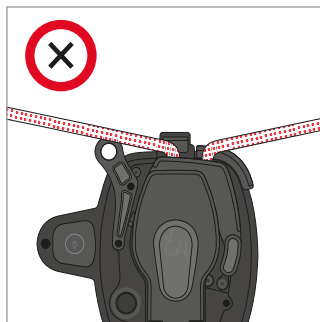

The dead rope must never be loaded. Do not build tramways using the primary rope as shown in the picture.



Stop immediately when a rope twist is observed, untwist and organise the rope before continuing.

G.06 REMOTE CONTROL

The Remote Control can be used for a multitude of applications for both personnel and equipment lifting.



150 m 492 ft

The TCX Ascender can be operated by a Remote Control to a distance of up to 150 metres (492 ft) in direct line of sight.



The Remote Control will interrupt the throttle control on the Ascender when used. The operator of the Ascender can take back control by using the throttle. (This is a new function). If the Remote Control is not used for 10 seconds, control is automatically returned to the Ascender. Control is instantly returned to the Ascender when the remote is turned off with the Power button.



10 m
33 ft

TCXII Seal Assault and Seal Force:
10 metre (33 ft) watertight for a maximum of 4 hours.


TCXII Urban Assault and Urban Force:



IP68



IP67

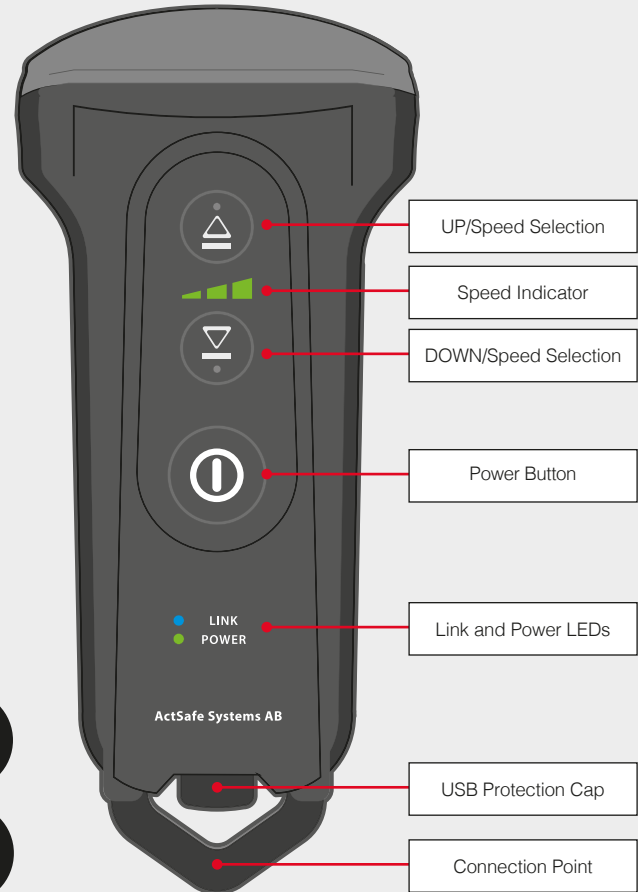

G.07 REMOTE CONTROL OPERATION

1. Activation and connection



Activate the Remote Control by pushing the Power button.



The green 'POWER' LED will show and the blue 'LINK' LED will start to blink for a few seconds whilst a connection is established with the Ascender.



Once connected, the blue 'LINK' LED on the Remote Control will be lit continuously.

2. Take control of the Ascender



By pushing either the 'UP' or 'DOWN' button the Remote Control will take over the control of the Ascender and the Ascender will stop immediately.




—
Short
press



The green LED on the Ascender will turn blue to indicate control has been taken over by the Remote Control.

3. Set the Ascender speed



Select between 3 speeds in both ascent and descent – 20%, 50% and 100%.



—
Short
press

The speeds can be set by a short push of the 'UP' or 'DOWN' button and the LED bar will indicate the selected speed.

4. Operate the Ascender



Once the speed is selected, holding down either the 'UP' or 'DOWN' button



will then activate the Ascender at that speed.

Hold
down

5. De-activation



Switch off the remote control. The Remote control will switch itself off after 30 mins of its last use.



CAUTION

The Remote Control will only work with the Ascender it has been delivered with. The serial number of the assigned Ascender is indicated on the Remote Control. In case of using multiple Ascenders, mark your Remote Controls to avoid any confusion.

When using the remote control, make sure a distance of at least 20 cm (8") is kept between the remote control and your torso and/or head. Contains FCC ID: SQGBT700.



NOTE

The TCXII Ascender can be used with multiple remote control units, the units need to specifically be paired to a particular Ascender this can be done by the user by following the pairing instructions sent with the additional remote control. The remote control unit that connects to the Ascender can gain control over the Ascender. The Remote control unit needs to be actively switched off (or after 10 minutes) to enable other remote control units to connect to the Ascender.

The power LED will flash RED if the Rope Cover of the Ascender is not closed when controlled. Ascending or descending is not possible. Close the Rope Cover.



Remote Control Battery

The Remote Control unit is equipped with an internal Battery which is charged via the supplied USB cable. Complete charging will take up to 150 minutes via a computer, or 75 minutes with the supplied adaptor. The USB Connection Point can be found on the bottom of the Remote Control under the protection cap that can be unscrewed.



The power LED on the Remote Control will turn red at 20% charge. The power LED will flash during charging and will be steady lit (green) once charging is completed. Remember to screw the protection cap back in properly, otherwise the remote control is not water tight.



CAUTION

Make sure that the Remote Control has visual contact with the Ascender to ensure safe operation and maximum range.

When using the Remote Control, should the unloaded be held by an operator to ensure that the rope can run unhindered into the Ascender while lowering. Uncontrolled rope running into the Ascender can cause a rope jam and eventually rope damage.



RECOMMENDATION

Always use the Remote Control in combination with a stop knot at the end of the rope.

Running into a top or bottom stop knot should be avoided as it may damage the rope.



DANGER

Always use a figure-eight knot as stop-knot. On ropes thinner than 11mm, a stopper donut disc should be placed on the rope before the knot.

The damaged part of the rope must be discarded if the Ascender has ran into the stop-knot.

G.08 TRANSPORTATION

Carry the Ascender by the lifting handle for short walking distances.

When carrying the Ascender any further stow it in the transportation box as this will protect the Ascender from any damage. Make sure the Ascender is secured when travelling in any vehicle.

G.09 STORAGE

Always clean and dry the Ascender and the transportation box before storage.

Always store the Ascender, Batteries and the Remote Control dry at a temperature between 5°C (41°F) and 25°C (77°F).



NOTE

The Ascender Batteries hold over 100 Wh of power and are therefore fully regulated as Dangerous Goods (*Class 9 UN3480* Lithium Ion Batteries) and must be handled and shipped accordingly. SKYLOTEC or SKYLOTEC directly for further details.



CAUTION

Always store with the Battery fully charged.

The Battery can stay connected to TCX during transport or short term storage (1 week). For longer storage, store the Battery disconnected and perform a maintenance charge every 3 months.

G.10 CHECKLIST BEFORE USE

Always check the Ascender before every use. Check the Ascender thoroughly and in accordance with your training and this manual.

If you are in any doubt about the condition of the Ascender, do not use it and contact your SKYLOTEC distributor or SKYLOTEC directly.

✓ NOTE

Watertightness testing:


Before every dive a watertightness test must be done. This test can only be done with SKYLOTEC testing equipment by SKYLOTEC trained service engineers or operators.

✓ Inspection of TCX Battery Pack

- » Correct TCX Battery is used
- » Pressure Valve is present and not loose
- » No damage to Battery Housing
- » Connector pins clean and not damaged
- » Battery charged
- » Battery Strap present

✓ Inspection of TCXII Ascender

- » Check the Ascender housing for cracks or severe damage
- » Pressure Valve is present and not loose
- » Check the Battery Connector pins on the Ascender:
 - Clean and no damage
 - Rubber sealing rings should be present, greasy and clean of any dirt. (see below)
- » Slide the Battery on to the Ascender and check that the Battery is locked in its position

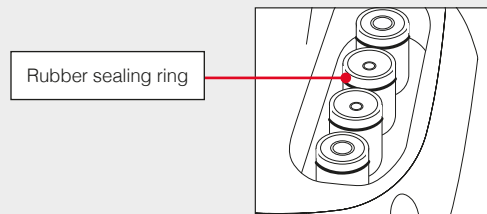



✓ Visual inspection of load-bearing parts

» Rope Arm Pulleys (A)

The two Rope Arm Pulleys should rotate easily, but not spin freely as they have water tight rubber sealings.

» Rope Cover

Check the Rope Cover function by opening and closing it. During closing the Rope Cover must lock unhindered into its position. Check the Rope Cover further for deformation, excessive wear or any sharp edges.

» Rope Arm (B)

Check that it rotates freely without touching any other parts and that the spring moves it back to its leftmost horizontal resting position. Check for deformation, excessive wear or any sharp edges.

» Rope Wedge (C)

Check Rope Wedge for deformation or

any visible damage. The Rope Wedge should be straight, sit just above the Rope Grab and should not touch on the inside of the Rope Grab.

» Rope Grab (D)

Check that Rope Grab is clean and not filled with dirt, sand, paint or any other foreign material. Check the inside for obvious damage, signs of wear or sharp edges. Check that teeth are in good condition.

» Connection Sling and Carabiner (E)

Check Connection Sling for wear, discoloration or damage such as cuts, abrasion and contaminants (Paint, glues, chemicals). Take particular note of the condition of the titanium Sling Bolt and Carabiner Loop. Inspect the Carabiner for wear, damage and deformation. Check that the Carabiner opens and locks correctly.

✓ **Controls check**

- » Switch Ascender on and wait for full activation of the Ascender (LED turns green).
- » Move the Throttle in both directions and ensure that Rope Grab turns smoothly in both directions.
- » Check that the emergency descent is working correctly. The lever should return to neutral position when being pulled.

✓ **Visual inspection of rope**

- » Inspect the full length of the rope. The rope must be discarded if the sheath is damaged and any part of the core is visible. The rope must also be discarded if there is any unusual shape/form or it has a glazed surface.
- » Damaged part of rope must be discarded if the machine has run into a top or bottom stopper knot.
- » Confirm that the rope is one of the selected ropes in section C.01.

For a full inspection checklist visit
www.skylotec.com



SERVICE & MAINTENANCE

Maintenance and cleaning
of the Ascender

H.01

Troubleshooting guide

H.02

H.01 MAINTENANCE & CLEANING OF THE ASCENDER

Only use original spare parts and materials recommended and supplied by SKYLOTEC.

Basic Testing Guidance for users and third party inspection. Note – This guidance does not replace an annual service as required by SKYLOTEC:

To be used safely, each Ascender should meet the following requirements at all times:

- » No obvious damage or excessive wear on Ascender and its components
- » Basic function test of Ascender and emergency descent (see section G.04)
- » 1,25 x WLL dynamic load test; descending full speed and then stop with max 10 cm (3.9") slippage
- » 1,5 x WLL static load test; no slippage allowed

RECOMMENDATION

Go through 'Checklist before usage' at every maintenance.

Repairs, annual service and inspection shall be carried out by an official SKYLOTEC Authorised Service Centre. More frequent inspection intervals may be required because of local regulations.

Cleaning the Ascender

-  Clean the Carabiner thoroughly, lubricate with thin oil and wipe dry
-  Spray the pins with an electronic connector cleaner/lubricator when needed

NOTE

Seal Assault and Seal Force only: When used in a marine environment, the Ascender should be cleaned by soaking for 2 hours in fresh water. During this period all buttons and moving parts should be operated several times to ensure that all salt residue dissolves. Let the Ascender dry afterwards for at least 24 hours before storing.

Do not use a high-pressure cleaner!

H.02 TROUBLESHOOTING GUIDE

If you need further assistance or are in any doubt please contact your SKYLOTEC distributor or SKYLOTEC directly.

PROBLEM	PROBABLE CAUSE	REMEDY
Battery does not work	Battery is flat	Charge the Battery
	BMS shut Battery off because of Battery damage or worn out Battery	Exchange Battery
	Battery is too cold — below -10°C (14°F)	Let the Battery warm up
	Battery is too hot — above 55°C (131°F)	Let the Battery cool down
Battery does not charge	Charger not connected	Connect Charger to socket
	Charger broken	Change charger
	Battery is too warm (red LED blinks on Battery)	Let the Battery cool down
	Battery is too cold — below -10°C (14°F)	Let the Battery warm up
	Battery is worn out	Replace the Battery
Emergency Descent does not work	Descent Lever disconnected	Gently hold the descending rubber bulge at the centre and re-position the descender lever in its slot

PROBLEM	PROBABLE CAUSE	REMEDY
No power	Battery is too warm (red LED blinks on Battery) Battery is too cold — below -10°C (14°F) Battery not charged Power Supply not switched on Too short a press on power button Covert mode activated	Let the Battery cool down Let the Battery warm up Check Battery, charge when empty Activate power supply Press for 2 seconds Check throttle
Power LED turns orange	Overheating of Ascender	Let Ascender cool down and restart
Power LED turns red	Problem with Battery or Power Supply Error detected in Ascender	Try another Battery or Power Supply Restart: LED Green – OK LED Red – Contact SKYLOTEC distributor or SKYLOTEC
Remote control does not connect	Ascender is not switched on Distance too far Signal interference Remote Control from another Ascender	Switch the Ascender on Get closer to Ascender Get closer to Ascender Find correct Remote Control

PROBLEM	PROBABLE CAUSE	REMEDY
Remote control does not work	Remote Control Battery is empty	Charge Remote Control
Rope Cover does not lock	Dirt in Rope Cover Dirt in locking mechanism Mechanical damage	Clean Rope Cover Clean and oil locking mechanism Contact SKYLOTEC distributor or SKYLOTEC
Rope slippage in Rope Grab	Rope is too soft Worn out Rope Grab	Use rope selected by SKYLOTEC. See C.01 Contact SKYLOTEC AB
No Response to Throttle	No power on Ascender Remote control is operating Ascender (blue power LED) Too much load on the Ascender Battery not working The Rope Cover is not closed	See 'no power' section of trouble-shooting guide Restart Ascender or wait for Remote to turn off Reduce the load to SWL or less See Battery section of troubleshooting guide Close the Rope Cover



POWER ASCENDERS WARRANTY TERMS

Warranty terms

I.01

I.01 WARRANTY TERMS

SKYLOTEC Nordic AB ("SKYLOTEC") guarantees that the TCXII Power Ascender ("Product") purchased has no defects due to the use of faulty parts or poor workmanship during its manufacture. This is subject to the terms of the limited warranty ("Warranty") given below.

- » Any claim will have to be made within the warranty period which is one year from delivery unless otherwise agreed.
- » SKYLOTEC will repair or, if necessary in SKYLOTEC's opinion, replace any defective parts and correct any problems resulting from poor workmanship, free of charge.
- » SKYLOTEC reserves the right to use reconditioned parts with performance parameters equal to those of new parts in connection with any services performed under the Warranty.

Claim under SKYLOTEC's warranty

Claims under SKYLOTEC's Warranty may be made only by direct customers of SKYLOTEC who, upon SKYLOTEC's request, can present the original sales invoice from SKYLOTEC. The Warranty is not transferable from one user or customer to another.

The Warranty does not apply if:

- » A damage or defect has occurred due to physical breakage, electrical faults external to the Product, water penetration of the Product, abuse or events of force majeure.
- » The Product is modified, maintained or repaired by a party not authorized by SKYLOTEC.
- » The Product is maintained and operated in ways other than recommended by SKYLOTEC.
- » The serial number stickers have been removed or tampered with.
- » A non-SKYLOTEC certified product is added to the Product.

Warranty Limitations

The Warranty does not extend to parts or Products requiring replacement due to normal wear and tear, corrosion, rust, stain, etc.

Any service, repair or replacement outside the scope of the Warranty shall be subject to the rates and terms of the SKYLOTEC approved service centre performing such service.

SKYLOTEC disclaims all other warranties, express or implied or statutory, including, but not limited to the implied warranties of merchantability or fitness for a particular purpose. Any implied warranty that may be imposed by applicable law is limited to the duration of this Warranty.

Limited liability and applicable law

The customer agrees that repair or replacement, as applicable, under the warranty services described herein are the sole and exclusive remedies with respect to any breach of the Warranty.

In no case shall SKYLOTEC be liable for any indirect, incidental, special or consequential loss or damage of whatsoever nature.

SKYLOTEC's sales and delivery of Products, as well as this Warranty, shall be governed by Swedish law, unless otherwise agreed in writing.



TECHNICAL DATA

Technical data

J.01

PERFORMANCE/PART:
TCXII URBAN ASSAULT ASCENDER

	VALUE	COMMENT
Rope	6 to 11 mm	TCXII Ascenders may only be used with ropes that have been selected by SKYLOTEC.
Working Load Limit (WLL)	150 kg (330 lb)	
Ascent speed	0-60 m/min (0-196 ft/min)	Depending on the weight of the load. See section E.02
Descent speed	0-70 m/min (0-229 ft/min)	
Emergency descent speed	0-70 m/min (0-229 ft/min)	Recommended maximum emergency descent speed 25m/min (0-82 ft/min)
Battery range	165 m at 100 kg load (541 ft at 220 lb)	At 20°C, (68°F) continuous Ascending. See section E.02
Charging time	90 min	Charging time for an empty Battery
Temperature range	-10°C (14°F) to 40°C (104°F)	Values apply to ambient temperature. See E.02 for more info
Over heating protection	Yes	
Ascender weight	11.5 kg (25.4 lb)	Ascender weight with Battery is 14.0 kg (30.9 lb)
Battery weight	2.5 kg (5.5 lb)	
Dimensions	32 x 28 x 27 cm (13 x 11 x 11")	
Remote Control	Range – up to 150 m (492 ft) Radio frequency – 2.4 GHz	The remote must have visual contact with the Ascender to ensure maximal safety and range
Water/dust resistance	IP 67 for both Force and Assault Ascenders, Green Battery and Green Remote Control	Watertight up to 10 metres (33 ft) for maximum 4 hours
Noise level	76 dB	
Max windspeed	12 m/s (39 ft/s)	Weather conditions should be stable and favourable to not affect the safety of personnel and/or lifting operation

PERFORMANCE/PART:**TCXII URBAN FORCE ASCENDER**

VALUE		COMMENT
Rope	11 mm	TCXII Ascenders may only be used with ropes that have been selected by SKYLOTEC.
Working Load Limit (WLL)	250 kg (550 lb)	
Ascent speed	0-24 m/min (0-78 ft/min)	Depending on the weight of the load. See section E.02
Descent speed	0-25 m/min (0-82 ft/min)	
Emergency descent speed	0-25 m/min (0-82 ft/min)	Recommended maximum emergency descent speed 25m/min (0-82 ft/min)
Battery range	Approximately 200 m at 100 kg (656 ft at 220 lb)	At 20°C, (68°F) continuous Ascending. See section E.02
Charging time	90 min	Charging time for an empty Battery
Temperature range	-10°C (14°F) to 40°C (104°F)	Values apply to ambient temperature. See E.02 for more info
Over heating protection	Yes	
Ascender weight	10.8 kg (23.8 lb)	Ascender weight with Battery 13.3 kg (29.3 lb)
Battery weight	2.5 kg (5.5 lb)	
Dimensions	32 x 28 x 27 cm (13 x 11 x 11")	
Remote Control	Range – up to 150 m (492 ft) Radio frequency – 2.4 GHz	The remote must have visual contact with the Ascender to ensure maximal safety and range
Water/dust resistance	IP 67 for both Force and Assault Ascenders, Green Battery and Green Remote Control	
Noise level	76 dB	
Max windspeed	12 m/s (39 ft/s)	Weather conditions should be stable and favourable to not affect the safety of personnel and/or lifting operation

PERFORMANCE/PART:
TCXII SEAL ASSAULT ASCENDER

	VALUE	COMMENT
Rope	6 to 11 mm	TCXII Ascenders may only be used with ropes that have been selected by SKYLOTEC.
Working Load Limit (WLL)	150 kg (330 lb)	
Ascent speed	0-60 m/min (0-196 ft/min)	Depending on the weight of the load. See section E.02
Descent speed	0-70 m/min (0-229 ft/min)	
Emergency descent speed	0-70 m/min (0-229 ft/min)	Recommended maximum emergency descent speed 25m/min (0-82 ft/min)
Battery range	165 m at 100 kg load (541 ft at 220 lb)	At 20°C, (68°F) continuous Ascending. See section E.02
Charging time	90 min	Charging time for an empty Battery
Temperature range	-10°C (14°F) to 40°C (104°F)	Values apply to ambient temperature. See E.02 for more info
Over heating protection	Yes	
Ascender weight	11.5 kg (25.4 lb)	Ascender weight with Battery is 14.0 kg (30.9 lb)
Battery weight	2.5 kg (5.5 lb)	
Dimensions	32 x 28 x 27 cm (13 x 11 x 11")	
Remote Control	Range – up to 150 m (492 ft) Radio frequency – 2.4 GHz	The remote must have visual contact with the Ascender to ensure maximal safety and range
Water/dust resistance	IP 68 for Black/Grey Ascender, Black/Grey Battery and Black/Grey Remote control	Watertight up to 10 metres (33 ft) for maximum 4 hours
Noise level	76 dB	
Max windspeed	12 m/s (39 ft/s)	Weather conditions should be stable and favourable to not affect the safety of personnel and/or lifting operation

PERFORMANCE/PART:**TCXII SEAL FORCE ASCENDER**

	VALUE	COMMENT
Rope	11 mm	TCXII Ascenders may only be used with ropes that have been selected by SKYLOTEC.
Working Load Limit (WLL)	250 kg (550 lb)	
Ascent speed	0-24 m/min (0-78 ft/min)	Depending on the weight of the load. See section E.02
Descent speed	0-25 m/min (0-82 ft/min)	
Emergency descent speed	0-25 m/min (0-82 ft/min)	Recommended maximum emergency descent speed 25m/min (0-82 ft/min)
Battery range	Approximately 200 m at 100 kg (656 ft at 220 lb)	At 20°C, (68°F) continuous Ascending. See section E.02
Charging time	90 min	Charging time for an empty Battery
Temperature range	-10°C (14°F) to 40°C (104°F)	Values apply to ambient temperature. See E.02 for more info
Over heating protection	Yes	
Ascender weight	10.8 kg (23.8 lb)	Ascender weight with Battery 13.3 kg (29.3 lb)
Battery weight	2.5 kg (5.5 lb)	
Dimensions	32 x 28 x 27 cm (13 x 11 x 11")	
Remote Control	Range – up to 150 m (492 ft) Radio frequency – 2.4 GHz	The remote must have visual contact with the Ascender to ensure maximal safety and range
Water/dust resistance	IP 68 for Black/Grey Ascender, Black/Grey Battery and Black/Grey Remote control	Watertight up to 10 metres (33 ft) for maximum 4 hours
Noise level	76 dB	
Max windspeed	12 m/s (39 ft/s)	Weather conditions should be stable and favourable to not affect the safety of personnel and/or lifting operation

LOGBOOK

Initial delivery	A
Inspection	B
Replaced consumables	C
Usage log	D

A. INITIAL DELIVERY

SKYLOTEC Nordic AB

Phone: +46 31 655 660

Email: info@skylotec.se

Serial number of Ascender

Year of manufacture

Delivery date

☐

Approval for use

Stamp and Sign

Signature

B. INSPECTION

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

B. INSPECTION

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

Date	Stamp and sign
Approved for use Yes ☐ No ☐	
Name of Inspector	

C. REPLACED CONSUMABLES

By SKYLOTEC or User Technician

Date	☐ Rope Grab	☐ Connection Sling	Stamp and Sign
	☐ Rope Arm	☐ Lifting Handle	
	☐ Rope Wedge	☐ Carabiners	
	☐ Rope Cover	☐ Other(see protocol)	

Date	☐ Rope Grab	☐ Connection Sling	Stamp and Sign
	☐ Rope Arm	☐ Lifting Handle	
	☐ Rope Wedge	☐ Carabiners	
	☐ Rope Cover	☐ Other(see protocol)	

Date	☐ Rope Grab	☐ Connection Sling	Stamp and Sign
	☐ Rope Arm	☐ Lifting Handle	
	☐ Rope Wedge	☐ Carabiners	
	☐ Rope Cover	☐ Other(see protocol)	

C. REPLACED CONSUMABLES
By SKYLOTEC or User Technician

Date	☐ Rope Grab ☐ Rope Arm ☐ Rope Wedge ☐ Rope Cover ☐ Connection Sling ☐ Lifting Handle ☐ Carabiners ☐ Other(see protocol)	Stamp and Sign
Date	☐ Rope Grab ☐ Rope Arm ☐ Rope Wedge ☐ Rope Cover ☐ Connection Sling ☐ Lifting Handle ☐ Carabiners ☐ Other(see protocol)	Stamp and Sign
Date	☐ Rope Grab ☐ Rope Arm ☐ Rope Wedge ☐ Rope Cover ☐ Connection Sling ☐ Lifting Handle ☐ Carabiners ☐ Other(see protocol)	Stamp and Sign

D. USAGE LOG

Date	Signature	Comment

D. USAGE LOG

Date	Signature	Comment

SKYLOTEC Nordic AB
Sagbäcksvägen 13
SE-43731 Lindome, Sweden

T: +46 31 65 56 60
E: info@skylotec.se
W: www.skylotec.com

© 2022 SKYLOTEC Nordic AB

